

# evolution fires

## OWNER'S MANUAL MIAMI CURVE



Electric Fireplace  
**AC 110V-120V 50Hz 1500 W**

### **WARNING**

**Read and understand** this entire owner's manual, including **all safety information**, before plugging in or **using** this product. Failure to do so could result in **fire, electric shock, or serious personal injury**.

### **CAUTION**

**Keep this owner's manual** for future reference. If you sell or give this product away, **make sure this manual accompanies this product**.

# SAVE THESE INSTRUCTIONS FOR FUTURE USE.



## CAUTION:

IF YOU USE THIS HEATER IN CONJUNCTION WITH A THERMAL CONTROL A PROGRAM CONTROLLER A TIMER OR ANY OTHER DEVICE THAT SWITCHES THE HEATER ON AUTOMATICALLY REMEMBER TO OBSERVE ALL SAFETY WARNINGS AT ALL TIMES. THE FIREPLACE HEATER HAS SAFETY OVERHEAT PROTECTION. IF THE OVERHEAT PROTECTION TRIPS SWITCH OFF ALL SWITCHES AND WAIT APPROXIMATELY 5 -10 MINUTES. IT SHOULD RESET AUTOMATICALLY ONCE THE UNIT COOLS DOWN.

## WARNING:


PROCEDURES AND TECHNIQUES IF NOT CAREFULLY FOLLOWED WILL RESULT IN DAMAGE TO THE EQUIPMENT, AND WILL EXPOSE THE USER TO THE RISK OF SERIOUS INJURY, ILLNESS OR DEATH. THIS ELECTRIC FIREPLACE HEATER IS FOR USE ON 120 VOLTS. THE CORD HAS A PLUG AS SHOWN AT A IN ILLUSTRATION BELOW. AN ADAPTER AS SHOWN AT C IS AVAILABLE FOR CONNECTING THREE BLADE GROUNDING TYPE PLUGS TO TWO SLOT RECEPTACLES. THE GREEN GROUNDING LUG EXTENDING FROM THE ADAPTER MUST BE CONNECTED TO A PERMANENT GROUND SUCH AS A PROPERLY GROUNDED OUTLET BOX. THE ADAPTER SHOULD NOT BE USED IF A THREE SLOT GROUNDED RECEPTACLE IS AVAILABLE.

A 15 AMP CIRCUIT IS REQUIRED TO OPERATE THIS HEATER. IF THE BREAKER TRIPS WHEN THE HEATER IS USED, YOU MAY NEED TO MOVE THE HEATER TO ANOTHER LOCATION OR UNPLUG OTHER APPLIANCES THAT ARE ON THE SAME CIRCUIT. IF YOU REQUIRE AN EXTENSION CORD, USE ONE THAT IS RATED AT 175 WATTS.

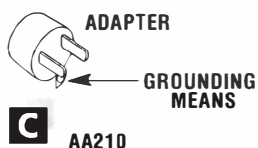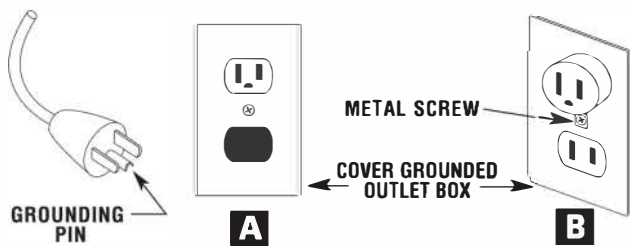

## PARTS LIST


Fireplace.....	1
A) Anchor screw.....	5
B) Wall anchors.....	5
C) Mounting bracket.....	1

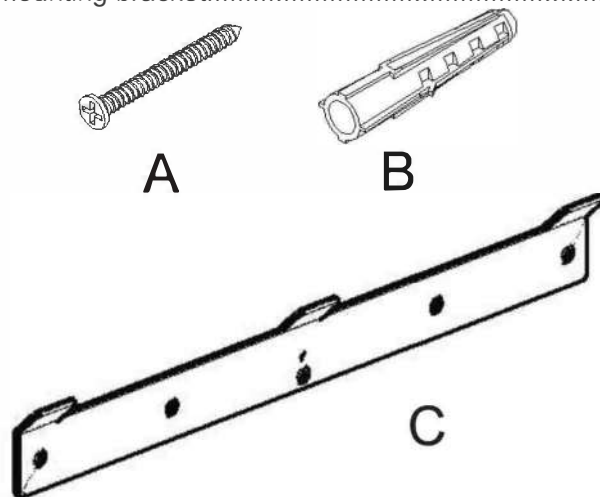

TOOLS REQUIRED: LEVEL, ELECTRIC DRILL, DRILL BITS (8MM (5/16 IN)), PHILLIPS HEAD SCREWDRIVER, HAMMER, SAFETY GOGGLES AND GLOVES

## INSTALLATION

Please be aware: that no products should be sealed against the wall/opening as this can effect the performance of the heater unit.

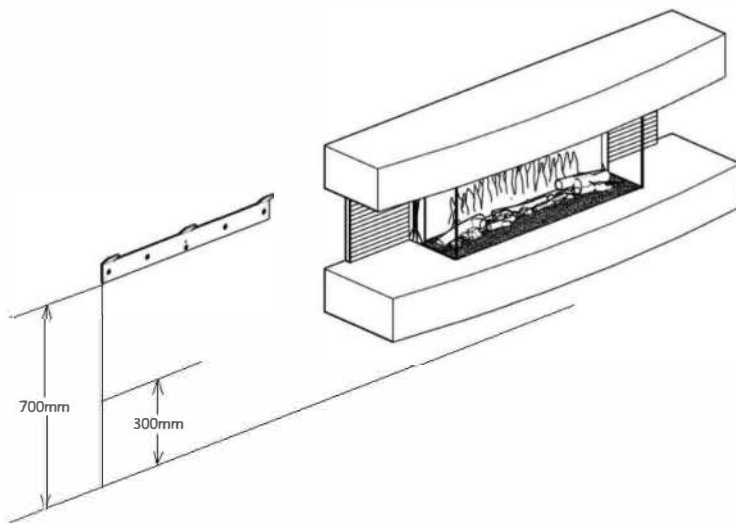

### Minimum Installation Height:

From floor level to bottom edge of product, Minimum 300mm.

This suite is supplied with a wall fixing Bracket.

The suite can be installed at any height as long as it is not below the recommended 300mm. (Please note the 700mm measurement is given as a common installation height).

The recommended installation height is a minimum of 300mm from the floor level to the underside of the hearth.

## Installation

Warning: Installing this product below 300mm will cause overheating issues.

The suite is designed as a wall mounted suite; it is not suitable to be installed at floor level.

This model is provided with a wall mounting bracket along with x5 screws and wall plugs.

PLEASE NOTE: The screws and plugs provided are only suitable for a solid wall fixing.

If the installation is onto a hollow/stud wall, we recommend that heavy duty wall anchors or equivalent are used.

### To install the product:

Measure 700mm from the floor level up the wall, Mark this measurement with a pencil.

Place the bottom edge of the wall bracket on the 700mm mark, level using a spirit level and mark and drill the x5 fixing holes.

Using the correct wall fixings screw and fix the wall bracket in place.

Locate the x3 slots in the rear of the product, carefully align these slots with the prongs on the wall bracket, lift and slot the product into place.

Locate the power cable socket on the bottom right hand side, underneath the hearth on the fire, and plug the power lead in.

The product is now ready to use.


## OPERATION

Once the electric heater has been properly installed and connected to a ground electrical outlet, it is ready to operate.


Note: Ensure the circuit breakers for the power supply are turned on.

### OPERATION WITH THE CONTROL PANEL

The heater controls are located right of the heater outlet.

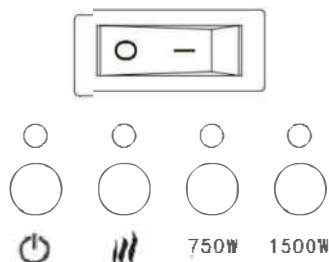

**O/I:** Press this switch, the unit power-on. When the O/I switch is turned off, all other functions will stop even though the buttons may be in the ON position.

 : Press this button to turn ON the fireplace. The unit will beep. Press again to turn off the fireplace and the fan will continue to work for 30 seconds without heat.


## OPERATION WITH THE REMOTE CONTROL


 : Press this button once for the flame effect.


The unit will beep. Press again to decrease the flame intensity. There are six light intensities to choose from. The flame optics will go lower under the sequence of 6, 5, 4, 3, 2 and 1. Press the button again to stop the flame effect.

**750W:** Press this button for low heat level. The indicator light will be ON. The heater will provide low heat level. Press once again to stop the low heat level function.

**1500W:** Press this button for high heat level. The unit will beep. The heater will provide high heat level. Press once again to stop the high heat level function.

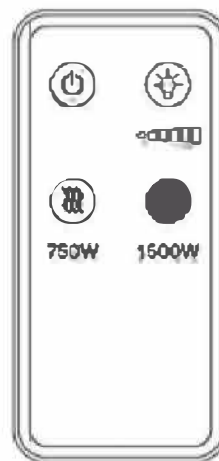

 : Press this button to turn ON the fireplace. The unit will beep. Press again to turn off the fireplace and the fan will continue to work for 30 seconds without heat.

 : Press this button once for the flame effect. The unit will beep. Press again to decrease the flame intensity. There are six light intensities to choose from. The flame optics will go lower under the sequence of 6, 5, 4, 3, 2 and 1. Press the button again to stop the flame effect.

**750W:** Press this button for low heat level. The indicator light will be ON. The heater will provide low heat level. Press once again to stop the low heat level function.

**1500W:** Press this button for high heat level. The unit will beep. The heater will provide high heat level. Press once again to stop the high heat level function.

Note: When the O/I switch is turned off, all other functions will stop even though the switches may be in the ON position.

## REMOTE CONTROL BATTERY REPLACEMENT

Replace with a CR2025 battery and follow the diagram at the back of remote handset to install the new battery.

**WARNING: DISCONNECT POWER AND UNPLUG THE POWER CORD BEFORE ATTEMPTING ANY MAINTENANCE OR CLEANING TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY.**

To avoid burning of the skin, please turn off the heater and cool down it for at least 10 minutes before maintenance.

## CLEANING

To clean unit, first turn off the controls on the unit and unplug the unit from power source.

To clean glass, remove dust with clean dry cloth or to remove finger prints and other marks clean glass with clean damp cloth. Do not use abrasive cleaners or spray liquids on the glass surface.

Metal and metal painted parts should be cleaned with a damp cloth. Do not use abrasive cleaners or spray liquids on these surfaces.

## STORAGE

When the heater is not in use, the heater should be stored in a dry location, away from possible damage. The power cord should be stored properly to avoid contact with hot or sharp objects.

## REPLACEMENT PARTS

ITEM	PART #	QTY
Mounting kit	R02716-48#1	1

## WARRANTY

Every electric appliance is tested before it leaves the factory and it is guaranteed for one year. If the unit should fail to operate correctly within one year from the date of purchase, call customer service at **407 851 1536**. We will, at our discretion either repair or replace the unit. It will have to be returned to us freight prepaid and we will return the repaired or replace unit to you freight prepaid. The company's sole obligation is to repair or replace the unit. This warranty is void if in the opinion of **Evolution Fires** the unit has been tampered with, altered, misused, damaged, abused or used with the wrong power source. The warranty is for homeowner use only and does not cover units used in commercial situations.

## WARRANTY CLAIM PROCEDURE

If a claimable defect occurs, please contact our customer service department at **407 851 1536**

Before you make your claim call, please make sure you have:

1. The description of the electric appliance
2. Proof of sale
3. Details regarding the defect
4. Name and address of the owner and installer

Claims must be lodged within six 6 months of appearance of defect. Failure to comply with this stipulation will make the warranty null and void. We reserve the right to a thirty day 30 delay following receipt of claim in which to inspect the product. We assume no responsibility for labor costs, removing/replacing a previously installed product, transportation or return of a product.

All claims must be reported immediately. Please refer to our website [www.evloutionfires.com](http://www.evloutionfires.com) to view our full warranty/return policy.

## EVOLUTION FIRES

11435 ROCKET BLVD

SUITE 108

ORLANDO

FLORIDA

32824

Phone number: 407 851 1536

Website: [www.evolutionfires.com](http://www.evolutionfires.com)

Email: [sales@evolutionfires.com](mailto:sales@evolutionfires.com)

# IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCE BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS INCLUDING THE FOLLOWING:

Read all instructions before using this electric fireplace.

Find a location for the electric heater that is protected from direct sunlight.

Do not plug the unit into the power outlet before reading all instructions.

This electric fireplace heater is hot when in use. To avoid burns do not let bare skin touch hot surfaces.

The grill directly in front of the heater outlet becomes hot during heater operation. Keep combustible materials, such as: furniture, pillows, bedding, papers, clothes and curtains at least 3 feet away from the front of the unit and keep them away from the sides and rear.

Extreme caution is necessary when any heater is used by or near children or individuals with disabilities and whenever the fireplace is left operating and unattended.

Always unplug fireplace when not in use.

Do not operate any heater with a damaged cord / plug or after heater malfunctions or if it has been dropped or damaged in any manner.

Do not use outdoors.

This heater is not intended for use in bathrooms, laundry areas and similar indoor locations.

Never locate heater where it may fall into a bathtub or other water container.

Do not run the power cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Arrange the cord away from traffic area and where it will not be tripped over.

To disconnect heater turn the controls to off then remove plug from outlet

Connect to properly grounded outlets only.

Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire or damage the heater.

To prevent a possible fire do not block air intakes or exhaust in any manner.

Do not use on soft surfaces like a bed where openings may become blocked.

A heater has no arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.

Use this heater only as described in this manual.

Any other use not recommended by the manufacturer may cause fire, electric shock or injury.


Always plug heater directly into wall outlet or receptacle. Never use with extension cord or retractable power bar outlet/power strip

Do not plug this product into a receptacle controlled by a wall switch or dimmer.

When storing or transporting the unit and cord keep in a dry place free from excessive vibration and store so as to avoid damage.



**CALL US FIRST!**

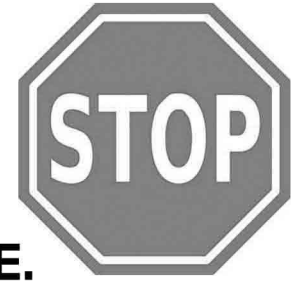

**DO NOT RETURN TO STORE.**

**For immediate help with assembly, product information, or  
if your product arrives damaged, call our toll-free number at  
**407 851 1536****

**or email:**

**[sales@evolutionfires.com](mailto:sales@evolutionfires.com)**

**Our staff is ready to provide assistance.**

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

PLEASE NOTE:

PRIOR TO INSTALLATION WE ADVISE YOU TO INSPECT THE PRODUCT FOR ANY DEFECTS OR DAMAGE AND RECOMMEND THE  
INSTALLATION BE CARRIED OUT BY A PROFESSIONAL INSTALLER.

EVOLUTION FIRES WILL NOT ACCEPT RESPONSIBILITY FOR DAMAGE ONCE THE PRODUCT HAS BEEN INSTALLED.

PLEASE NOTE:

DO NOT DISPOSE OF YOUR CARTON UNTIL YOU ARE COMPLETELY SATISFIED WITH YOUR NEW ELECTRIC FIREPLACE.

NOTE: The electric heater may emit a slight harmless odor when first turned on. This is caused by activating the internal heater components for the first  
time and should not occur again. THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.